


# Pillars



CORNERSTONE®  
100

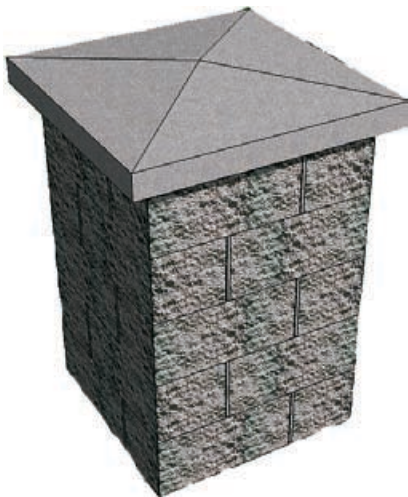

Make a statement, short or tall...

Pillars add a finishing touch of elegance to any CornerStone wall project. They can be used to create distinguished entrance ways to any residence or business and the unit's hollow cores greatly simplify the placement of lighting in the pillars. This brochure provides simple instructions for the creation of multi-size pillars.



## 27" Pillar

### >>> STEP 1 LEVELING PAD

- Excavate and prepare your **Sub Base Leveling Pad**
- Install leveling pad of well graded gravel (also known as road base aggregates) a minimum of 8" (200 mm) thick and 40" (1000 mm) square. Compact to 95% standard proctor density
- Install the first 4 corner units perpendicular and square to each other
- Ensure first base course is level and square to the center of the pad
- Bury the first course completely for stability

### >>> STEP 2 SECOND COURSE

- Place second course of the **CornerStone® 90° Corner** units directly on top of the first course
- Flip and turn the second course corner units upside down to create an overlapping bond
  - **Clear Crush Drain Gravel** (Angular Aggregates free of fines) should be placed in the cores and middle of pillar
  - (concrete core filling optional) use a dry concrete mix to prevent leaching of cement
- **Concrete Adhesive** should be applied to all units to ensure course to course interlock

### >>> STEP 3 ADDITIONAL COURSES

- Repeat Step 1 and Step 2 until desired height of pillar has been reached

### >>> STEP 4 COMPLETION

- Complete the pillar with a **Pillar Cap**
    - Secure the **Pillar Cap** with a concrete adhesive
- \*Pillar cap approximately 32" (508mm)*

